



Original	Replacement
 Standby / On	 Power
 STB	 Shift + 3
 DVD	 Shift + 2
 AUX	 Shift + 7
 TV	 Shift + 1
 Vol Mode	 Smart / List
 Auto Setup	 Setup / OPT /
 Input Mode	 AV / Input / RDS
 Sleep	 Sleep / Timer
 1 / 5BEAM	 1
 2 / ST + 3BEAM	 2
 3 / 3BEAM	 3
 4 / Stereo	 4
 5 / My Beam	 5
 6 / Surround	 Eject / Surround
 6 / Surround	 6
7 / Music	7

Original	Replacement
 8 / Movie	 8
 9 / Sports	 9
 0 / Off	 0
 +10	 Guide / EPG / -/-
 (•)	 Audio / Lang I/II
 CH Level	 Display / Media
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Test	 Text / Goto
 Down	 Down
 Return	 Back / Return
 Volume +	 Vol+
 Volume -	 Vol-
Mute	Mute / Dimmer











 

Original	Replacement
Power	Power
Input 1	Smart / List
Input 2	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH+	CH+ / Page+
Tv Vol+	Vol+
CH-	CH- / Page-
Tv Vol-	Vol-

Original	Replacement
Tv Input	AV / Input / RDS
Tv Mute	Mute / Dimmer
Power AUX	Shift + Power
1 AUX	Shift + 1
2 AUX	Shift + 2
3 AUX	Shift + 3
4 AUX	Shift + 4
5 AUX	Shift + 5
6 AUX	Shift + 6
7 AUX	Shift + 7
8 AUX	Shift + 8
9 AUX	Shift + 9
0 AUX	Shift + 0





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Menu	 Menu / Home
 Return	 Back / Return
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+

Original	Replacement
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Play	 Play / Slow





Original	Replacement	Original	Replacement
Power	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
<<	<< / Tune-		
Stop	Stop / Hold		
>>	>> / Tune+		
Pause	Pause / Step / Freeze		
Play	Play / Slow		

Original	Replacement

