







 



 


 
 

 

 


 



 



 

 






 
 
 


 
 

 

 

 
 






	Original	Replacement		Original	Replacement
	AUX	 1		 A/BC/D/E Tuner	 Smart
	Tape	 2			
	Tuner	 3			
	CD	 4			 List
	Phono	 5			 Play
	Tape 1	 6			 I<<
	Tape 2	 7			 >>I
	Dir A Tape	 Menu			 Stop
	Dir B Tape	 Info			 Sleep
	Rec/Pause Tape	 Up			 Power
	Play Tape	 Ok			 Vol -
	Stop Tape	 Down			 Vol +
	<< Tape	 Left			
	>> Tape	 Right			
	A/B Tape	 Exit			
	Preset - Tuner	 Ch -			
	Preset + Tuner	 Ch +			

