



| Original | | Replacement | | Original | | Replacement | |
|---|--------|---|-------------------|---|-------------|---|---------------------------------------|
|  | Power |  | Power |  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |  | Home |  | Menu / Home |
|  | 1 |  | 1 |  | P- |  | CH- / Page- |
|  | 2 |  | 2 |  | * |  | Smart / List |
|  | 3 |  | 3 |  | Up |  | Up |
|  | 4 |  | 4 |  | i |  | Info / Angle |
|  | 5 |  | 5 |  | Left |  | Left |
|  | 6 |  | 6 |  | OK |  | OK |
|  | 7 |  | 7 |  | Right |  | Right |
|  | 8 |  | 8 |  | Back |  | Back / Return |
|  | 9 |  | 9 |  | Down |  | Down |
|  | EPG |  | Guide / EPG / -/- |  | Exit |  | Exit / Cancel / Clear |
|  | 0 |  | 0 |  | Netflix |  | Shift + Red / Netflix / Search |
|  | TXT |  | Text / Goto |  | YouTube |  | Shift + Yellow / YouTube / Repeat A-B |
|  | Vol+ |  | Vol+ |  | prime video |  | Shift + Blue / Prime / Random |
|  | Source |  | AV / Input / RDS |  | USB |  | Shift + 8 |
|  | P+ |  | CH+ / Page+ |  | Red |  | Red / Netflix / Search |





| Original | | Replacement | | Original | | Replacement | |
|----------|--------|-------------|-----------------------------|----------|--|-------------|--|
| | Green | | Green / APP / Repeat | | | | |
| | Yellow | | Yellow / YouTube / Repeat | | | | |
| | Blue | | Blue / Prime Video / Random | | | | |
| | << | | << / Tune- | | | | |
| | Play | | Play / Slow | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | >> | | >> / Tune+ | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | Stop | | Stop / Hold | | | | |
| | Audio | | Audio / Lang I/II | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

