



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/--
	Rec		Rec / Rec Mode
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	≡		D.Menu / Top
	Input		AV / Input / RDS
	Smart Colors		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Home		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original	Replacement
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	SLOW Play / Slow
	STEP-FREEZE Pause / Step / Freeze
	HOLD Stop / Hold
SUBT	EQ Subtitle / EQ
AUDIO	LANG I/II Audio / Lang I/II
TXT	GOTO TEXT Text / Goto
NETFLIX	SHIFT + SEARCH Shift + Red / Netflix /
YouTube	SHIFT + REPEAT A-B Shift + Yellow / YouTube /
prime video	SHIFT + RANDOM Shift + Blue / Prime
Google Play	SHIFT + APP Shift + Green / APP /

Original	Replacement

