



























 

 









































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Display		Display / Media
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	TV / Radio		TV/Radio /
	EPG		Guide / EPG / -/-
	CH +		CH+ / Page+
	Vol -		Vol-
	Eject		Eject / Surround
	CH -		CH- / Page-





Original	Replacement
Subtitle	Subtitle / EQ
CH List	Smart / List
Rec	Rec / Rec Mode
Rec List	+ Shift + Smart / List
TV/TXT / D.Pro	+ Shift + TV/Radio / Program
TV/TXT / D.Pro	Text / Goto
Cancel / D.Rep	+ Shift + Exit / Cancel / Clear
Cancel / D.Rep	+ Shift + Green / APP /
Reveal / D.Goto	+ Shift + Text /
Nicam/A2 /	+ Shift + Play /
Nicam/A2 /	+ Shift + Audio / Lang I/II
Index / I<<<	I<<< / Preset-
Hold / >>>I	>>>I / Preset+
Hold / >>>I	+ Shift + Stop /
Size / D.Zoom	Zoom / Size
Subpage / D.Title	+ Shift + Sound / Title
<<<	<<< / Tune-

Original	Replacement
>>>	>>> / Tune+
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold
Red / D.Set	+ Shift + OK
Red / D.Set	Red / Netflix / Search
Green / D.Menu	D.Menu / Top
Green / D.Menu	Green / APP / Repeat
Yellow / D.Sub.	Yellow / YouTube / Repeat
Yellow / D.Sub.	+ Shift + Subtitle / EQ
Blue / D.Lan	Blue / Prime Video / Random
Blue / D.Lan	Audio / Lang I/II

