







 




 














 


 








 







 












Original	Replacement	Original	Replacement
 Power	 Power	 Blue / SMode	 Shift + Dual
 Mute	 Mute	 Blue / SMode	 Shift + Blue
 Exit	 Exit	 Up	 Up
 Text	 Text	 Left	 Left
 Audio I/II	 Dual	 Enter	 Ok
 Display	 Info	 Right	 Right
 Sleep	 Sleep	 Down	 Down
 P+	 Ch +	 1	 1
 P-	 Ch -	 2	 2
 V+	 Vol +	 3	 3
 V-	 Vol -	 4	 4
 Red / Source	 AV	 5	 5
 Red / Source	 Shift + Red	 6	 6
 Green / TV	 Menu	 7	 7
 Green / TV	 Shift + Green	 8	 8
 Yellow / PMode	 Format	 9	 9
 Yellow / PMode	 Shift + Yellow	 0	 0





Original	Replacement	Original	Replacement
	Stop / FAV -		Stop / FAV -
	Recall		<< / FAV
	Red		<< / FAV
	Green		>> / FAV+
	Yellow		>> / FAV+
	Blue / Repeat		EPG
	Blue / Repeat		USB/SD
	Subtitle		Recorder
	Pause/Play / Hold		CH.List
	Pause/Play / Hold		TV / Radio
	Size		
	Mix		
	Reveal		
	TXT Index		
	I<< / Subpage		
	>>I / Lang		
	Stop / FAV -		

