






Original	Replacement	Original	Replacement
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Replacement	Original	Replacement
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





	Original	Replacement	Original	Replacement
		 >> / Tune+		
		 GREEN Green / APP / Repeat		
		 I<< I<< / Preset-		
		 YELLOW Yellow / YouTube / Repeat		
		 BLUE Blue / Prime Video / Random		
		 >>I >>I / Preset+		
		 PLAY Play / Slow		
		 PAUSE Pause / Step / Freeze		
		 TEXT Text / Goto		
		 STOP Stop / Hold		
		 SUBTITLE Subtitle / EQ		
		 RADIO TV/Radio /		
		 OPT Setup / OPT /		
		 DMP Display / Media		
		 INDEX D.Menu / Top		
		 REC Rec / Rec Mode		

