




Original	Replacement
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
Lang	Audio / Lang I/II
Source (Games)	Eject / Surround
Movie-Music-Phot	Picture / Format
[≡]..	Zoom / Size
*/O	Sleep / Timer
TV	TV/Radio /
Q.Menu	D.Menu / Top
[-O-]	Setup / OPT /
[≡]/Text	Text / Goto

Original	Replacement
Menu	Menu / Home
Up	Up
i	Info / Angle
Left	Left
OK	OK
Right	Right
Exit	Exit / Cancel / Clear
Down	Down
Back	Back / Return
Vol+	Vol+
World (Violet)	Smart / List
PR+	CH+ / Page+
Vol-	Vol-
*/Q	Display / Media
PR-	CH- / Page-
1	1
2	2





	Original	Replacement	Original	Replacement
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Guide	 Guide / EPG / -/--		
	0	 0		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Recall	 Shift + Back / Return		

