Mandis shop

CLEANFAST

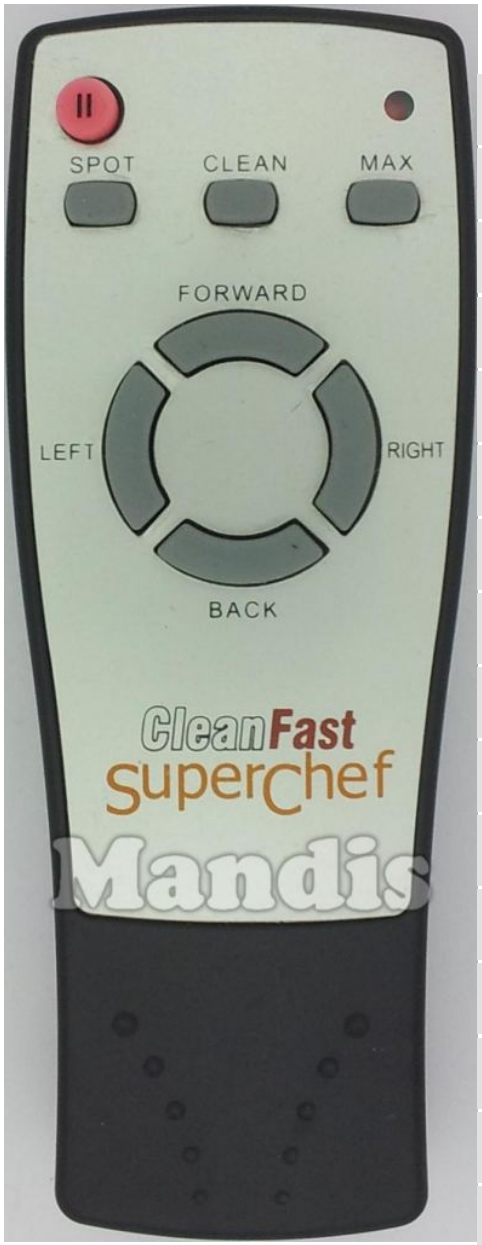


| Original | | Replacement | |
|---|---|---|---|
| II | II | Power | Power |
| SPOT | Spot | 1 SETUP | 1 / Setup |
| CLEAN | Clean | 2 MENU | 2 / Menu |
| MAX | Max | 3 EXIT | 3 / Exit |
| FORWARD | Forward | | Up |
| BACK | Back | | Down |
| RIGHT | Right | | Right |
| LEFT | Left | | Left |

| Original | Replacement |
|---|---|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

https://alle-fernbedienungen.de/en/SuperChef/1038414-82980-replacement-remote-control-for-SuperChef-Clean-Fast.html