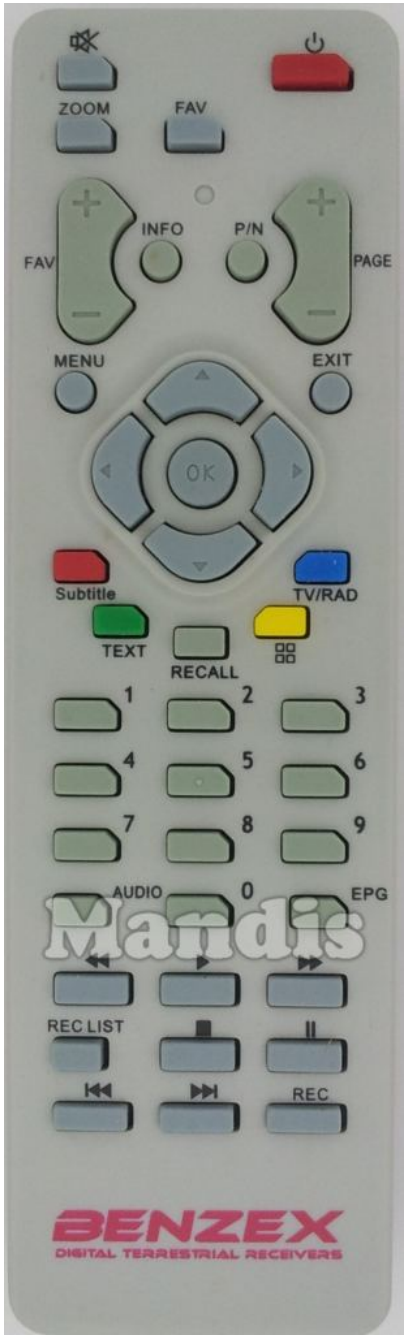

Original		Replacement	
	Power		Power
	Mute	MUTE	Mute
ZOOM	Zoom	ZOOM	Eject
FAV	FAV	FAV PRE-CH	Pre Ch
FAV	FAV+	+ VOL	Vol +
FAV	FAV-	VOL −	Vol -
INFO	Info	DISPLAY INFO	Info
P/N	P/N	HOME SMART	Smart
PAGE	Page+	+ CH	Ch +
PAGE	Page-	CH −	Ch -
MENU	Menu	TOP MENU MENU	Menu
EXIT	Exit	CLEAR EXIT	Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
OK	OK	OK	Ok

Original		Replacement	
Subtitle	Red	A	Red
TEXT	Green	B	Green
	Yellow	C	Yellow
TV/RAD	Blue	D	Blue
Subtitle	Subtitle	AD SUBT	Subt
TEXT	Text	REPEAT TEXT	Text
	[+]	SETTINGS OPT	Options
TV/RAD	Tv/Radio	SEARCH TV/R	TV/R
RECALL	Recall	RETURN BACK	Back
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8

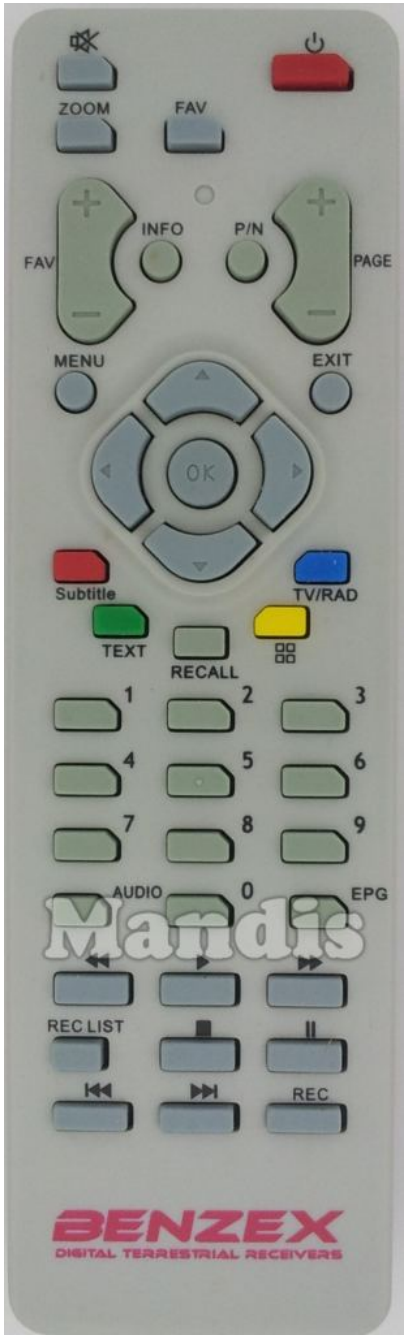

Original		Replacement		Original	Replacement
9	9	9	9		
0	0	0	0		
AUDIO	Audio	SOUND DUAL	Dual		
EPG	EPG	GUIDE	Guide		
	<<		<<		
	Play	PLAY MODE	Play		
	>>		>>		
	Stop		Stop		
	Pause		Pause		
	I<<		I<<		
	>>I		>>I		
REC	Rec	REC MODE	Rec		
REC LIST	Rec List	DISC NAV LIST	List		