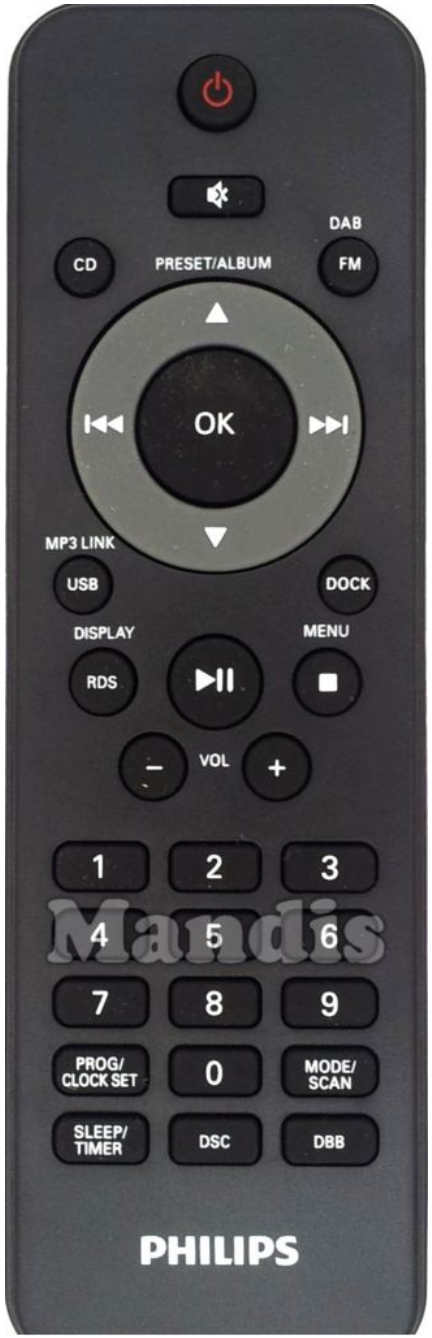

Original		Replacement	
	Power		Power
	Mute	MUTE	Mute
PRESET/ALBUM	Preset / Album		Up
	Preset / Album		Down
	>>I		>>I
	>>I		Right
	I <<		I <<
	I <<		Left
OK	OK	OK	Ok
DISPLAY RDS	RDS/ Display	DISPLAY INFO	Info
	Play	PLAY MODE	Play
	Pause		Pause
MENU	Stop		Stop
MENU	Menu	TOP MENU MENU	Menu
VOL +	Vol +	+ VOL	Vol +
VOL -	Vol -	VOL -	Vol -
1	1	1	1

Original		Replacement	
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
PROG/ CLOCK SET	Prog/ Clock Set	SETTINGS OPT	Options
SLEEP/ TIMER	Sleep/ Timer	PROG SLEEP	Sleep
DSC	DSC	APP MEDIA	Media
MODE/ SCAN	Mode/ Scan	FAV PRE-CH	Pre Ch
DBB	DBB	HOME SMART	Smart

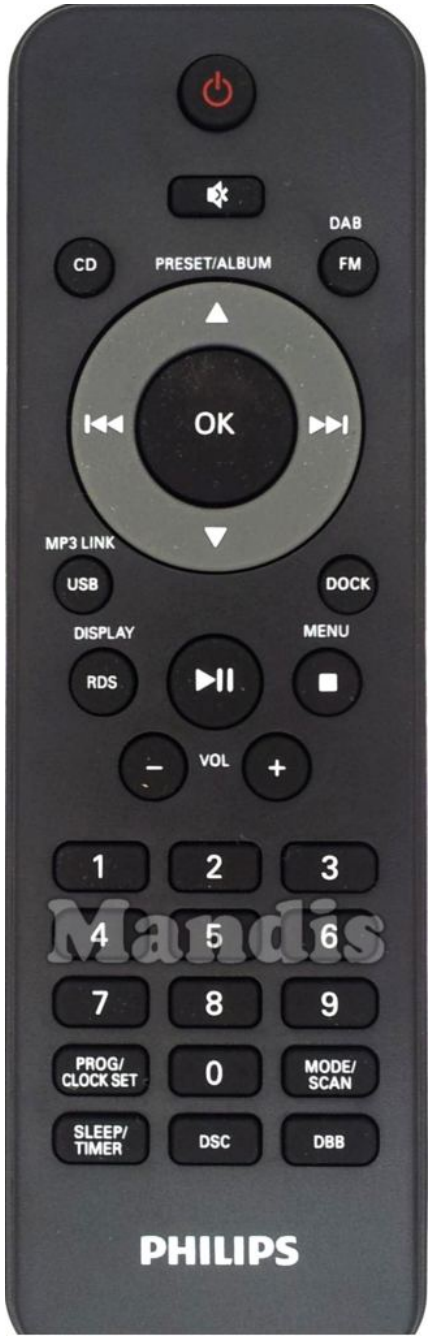

Original		Replacement	
	Power		Power
	Mute	MUTE	Mute
PRESET/ALBUM	Preset / Album		Up
	Preset / Album		Down
	>>I		>>I
	>>I		Right
	I <<		Left
	I <<		I <<
OK	OK	OK	Ok
DISPLAY RDS	RDS/ Display	DISPLAY INFO	Info
	Play	PLAY MODE	Play
	Pause		Pause
MENU	Stop		Stop
MENU	Menu	TOP MENU MENU	Menu
VOL +	Vol +	+ VOL	Vol +
VOL -	Vol -	VOL -	Vol -
1	1	1	1

Original		Replacement	
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
PROG/ CLOCK SET	Prog/ Clock Set	SETTINGS OPT	Options
DSC	DSC	APP MEDIA	Media
SLEEP/ TIMER	Sleep/ Timer	PROG SLEEP	Sleep
MODE/ SCAN	Mode Scan	FAV PRE-CH	Pre Ch
DBB	DBB	HOME SMART	Smart

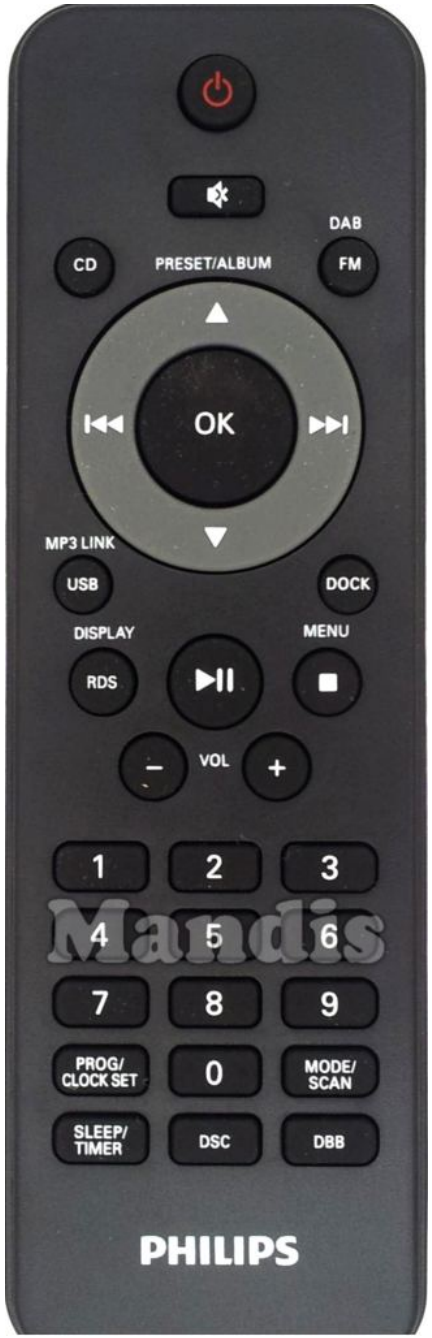

Original		Replacement	
	Power		Power
	Mute	MUTE	Mute
PRESET/ALBUM	Preset / Album		Up
	Preset / Album		Down
	>>I		>>I
	>>I		Right
	I <<		I <<
	I <<		Left
OK	OK	OK	Ok
DISPLAY RDS	RDS/ Display	DISPLAY INFO	Info
	Play	PLAY MODE	Play
	Pause		Pause
MENU	Stop		Stop
MENU	Menu	TOP MENU MENU	Menu
VOL +	Vol +	+ VOL	Vol +
VOL -	Vol -	VOL -	Vol -
1	1	1	1

Original		Replacement	
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
PROG/ CLOCK SET	Prog/ Clock Set	SETTINGS OPT	Options
SLEEP/ TIMER	Sleep/ Timer	PROG SLEEP	Sleep
DSC	DSC	APP MEDIA	Media
MODE/ SCAN	Mode/ Scan	FAV PRE-CH	Pre Ch
DBB	Dbb	HOME SMART	Smart

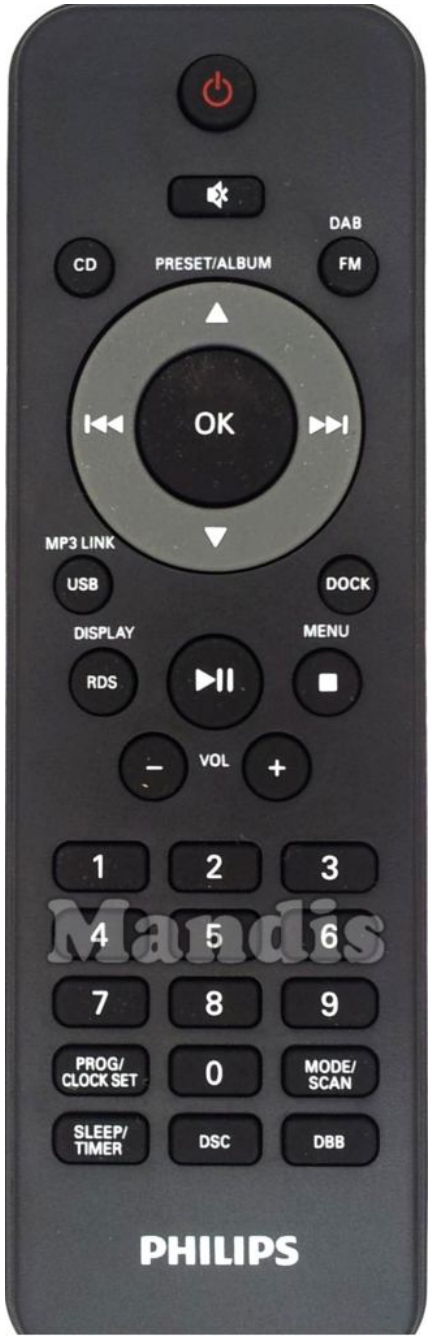

Original		Replacement	
	Power		Power
	Mute	MUTE	Mute
PRESET/ALBUM	Preset / Album		Up
	Preset / Album		Down
	>>I		>>I
	>>I		Right
	I <<		I <<
	I <<		Left
OK	OK	OK	Ok
DISPLAY RDS	RDS/ Display	DISPLAY INFO	Info
	Play	PLAY MODE	Play
	Pause		Pause
MENU	Stop		Stop
MENU	Menu	TOP MENU MENU	Menu
VOL +	Vol +	+ VOL	Vol +
VOL -	Vol -	VOL -	Vol -
1	1	1	1

Original		Replacement	
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
PROG/ CLOCK SET	Prog/ Clock Set	SETTINGS OPT	Options
SLEEP/ TIMER	Sleep/ Timer	PROG SLEEP	Sleep
DSC	DSC	APP MEDIA	Media
MODE/ SCAN	Mode/ Scan	FAV PRE-CH	Pre Ch
DBB	DBB	HOME SMART	Smart