Mandis shop

Pioneer CU-DC019 (TV)

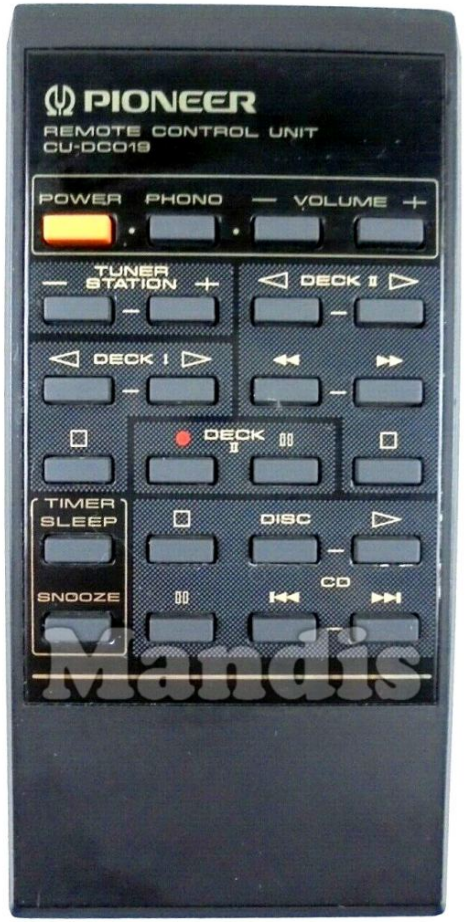

Original	Replacement
Power	Power
Phono	2
Volume -	Vol-
Volume +	Vol+
Tuner Station -	Shift + I<< / Preset-
Tuner Station -	CH- / Page-
Tuner Station +	Shift + >>I / Preset+
Tuner Station +	CH+ / Page+
Deck II Play Reverse	Shift + Left
Deck II Play	Shift + Right
Deck I Play	Left
Deck I Play	Right
Deck II <<	Shift + Down
Deck II <<	<< / Tune-
Deck II >>	Shift + Up
Deck II >>	>> / Tune+
Deck I Stop	OK

Original	Replacement
Deck II Rec	Rec / Rec Mode
Deck II Rec Pause	Shift + Pause / Step /
Deck II Stop	Shift + OK
Sleep	Sleep / Timer
CD Stop	Stop / Hold
CD Disc	Eject / Surround
CD Play	Play / Slow
Snooze	Smart / List
CD Pause	Pause / Step / Freeze
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+

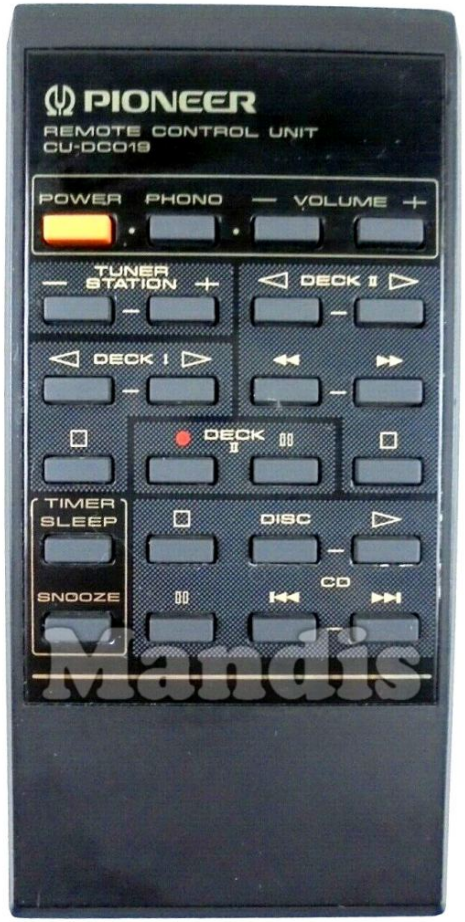

Original		Replacement	
POWER	Power		Power
PHONO	Phono	DVD 2	2
VOLU	Volume -	VOL −	Vol-
LUME +	Volume +	+ VOL	Vol+
TUNE STATI −	Tuner Station -	SHIFT + PRESET-	Shift + I<< / Preset-
TUNE STATI −	Tuner Station -	CH PAGE −	CH- / Page-
UNER ATION +	Tuner Station +	SHIFT + PRESET+	Shift + >>I / Preset+
UNER ATION +	Tuner Station +	+ CH PAGE	CH+ / Page+
DEC	Deck II Play Reverse	SHIFT +	Shift + Left
CK II	Deck II Play	SHIFT +	Shift + Right
DEC	Deck I Play		Left
CK I	Deck I Play		Right
	Deck II <<	SHIFT +	Shift + Down
	Deck II <<	TUNE-	<< / Tune-
	Deck II >>	SHIFT +	Shift + Up
	Deck II >>	TUNE+	>> / Tune+
	Deck I Stop	OK	OK

Original		Replacement	
DEC II	Deck II Rec	REC MODE	Rec / Rec Mode
CK II	Deck II Rec Pause	SHIFT + STEP - FREEZE	Shift + Pause / Step /
	Deck II Stop	SHIFT + OK	Shift + OK
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
	CD Stop	HOLD	Stop / Hold
DISC	CD Disc	SURROUND	Eject / Surround
	CD Play	SLOW	Play / Slow
SNOOZE	Snooze	LIST SMART	Smart / List
	CD Pause	STEP - FREEZE	Pause / Step / Freeze
	CD I<<	PRESET-	I<< / Preset-
	CD >>I	PRESET+	>>I / Preset+