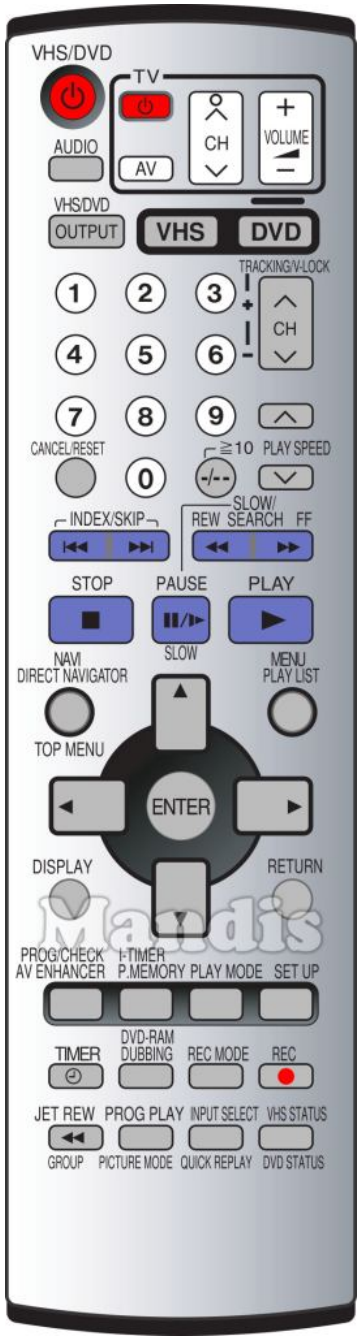

Original	Replacement	Original	Replacement
Picture Mode	Picture / Format	CH+ / Tracking/V-Lock+	CH+ / Page+
DVD Status	Info / Angle	Cancel / Reset	Exit / Cancel / Clear
Dubbing	Yellow / YouTube / Repeat	-/-- / >=10	Guide / EPG / -/--
VHS/DVD	Smart / List	Play	Play / Slow
Quick Replay	Red / Netflix / Search	Up	Up
Group	Zoom / Size	Left	Left
P.Memory	Fav / Marker / PC	Enter	OK
Return	Back / Return	Right	Right
AV Enhancer	AV / Input / RDS	Down	Down
Direct Navigator / Top Menu	D.Menu / Top	Display	Display / Media
Play List / Menu	Menu / Home	Setup	Setup / OPT /
Play Mode	Shift + Play /	Timer	Sleep / Timer
REW / << Slow/Search	<< / Tune-	0	0
FF / Slow/Search	>> / Tune+	Audio	Audio / Lang I/II
VHS/DVD Power	Power	1	1
Pause / Slow	Pause / Step / Freeze	2	2
CH- / Tracking/V-Lock-	CH- / Page-	3	3

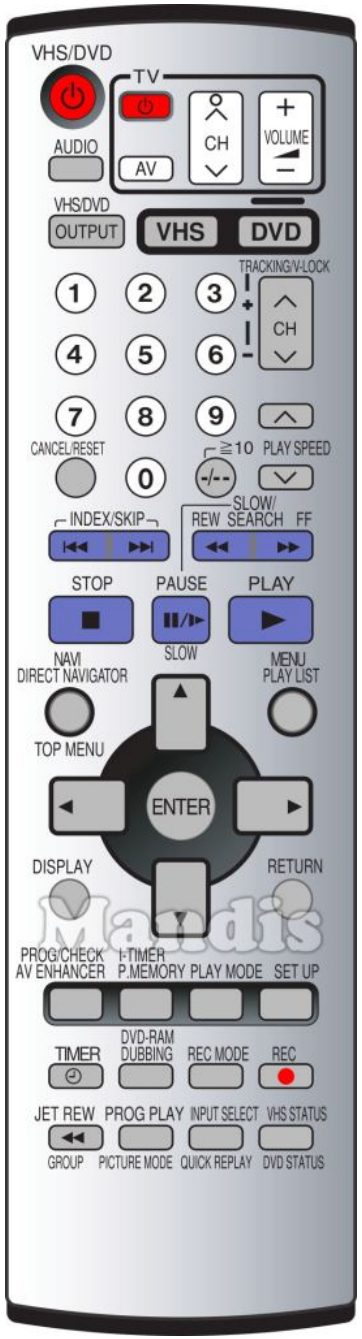

Original		Replacement		Original		Replacement	
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
INDEX/S	I<< Skip	PRESET-	I<< / Preset-				
X/SKIP	Skip >>I	PRESET+	>>I / Preset+				
STOP	Stop	HOLD	Stop / Hold				

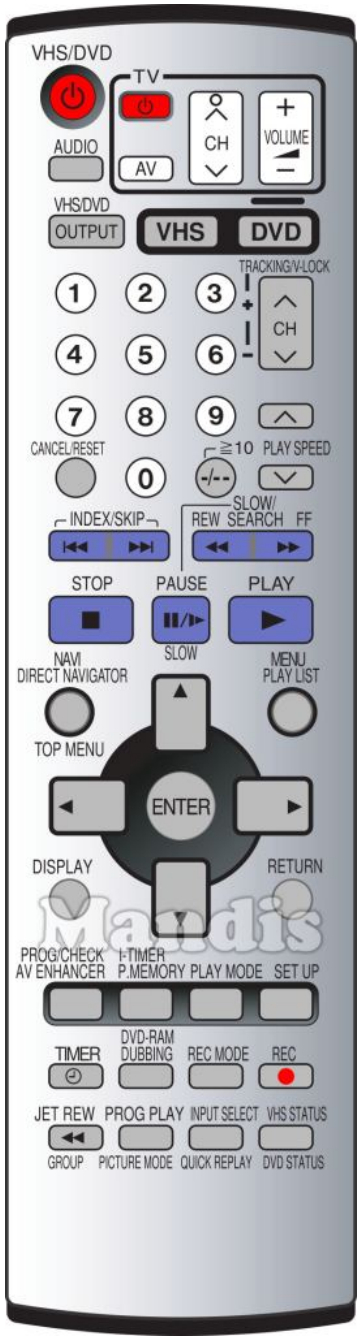

Original	Replacement	Original	Replacement
Prog Play	SHIFT + SLOW ▶ (Shift + Play /)	FF	TUNE+ ▶▶ (>> / Tune+)
I-Timer	SHIFT + TIMER SLEEP (Shift + Sleep / Timer)	Play	SLOW ▶ (Play / Slow)
Cancel / Reset	CLEAR EXIT CANCEL (Exit / Cancel / Clear)	Menu	HOME MENU (Menu / Home)
VHS/DVD	LIST SMART (Smart / List)	Up	Up
Display	MEDIA DISPLAY (Display / Media)	Left	Left
VCR Status	ANGLE INFO (Info / Angle)	Enter	OK (OK)
Dubbing	YouTube REPEAT A-B (Yellow / YouTube / Repeat)	Right	Right
Jet Rew	SHIFT + TUNE- ◀◀ (Shift + << /)	Down	Down
Pause / Slow	STEP-FREEZE ⏸ (Pause / Step / Freeze)	Stop	HOLD ■ (Stop / Hold)
CH+ / Tracking/V-Lock+	CH+ PAGE (CH+ / Page+)	Rec Mode	SHIFT + REC MODE (Shift + Rec / Rec Mode)
CH- / Tracking/V-Lock-	CH- PAGE (CH- / Page-)	Timer	TIMER SLEEP (Sleep / Timer)
VHS/DVD Power	Power	Rec	REC MODE (Rec / Rec Mode)
-/-- / >=10	-/-- GUIDE EPG (Guide / EPG / -/--)	0	0
Return	RETURN BACK (Back / Return)	Audio	LANG I/II AUDIO (Audio / Lang I/II)
Prog/Check	PROGRAM TV/RADIO (TV/Radio /)	1	TV 1
I<< Index	PRESET- ⏮ (I<< / Preset-)	2	DVD 2
Index >>I	PRESET+ ⏭ (>>I / Preset+)	3	CD-STB 3

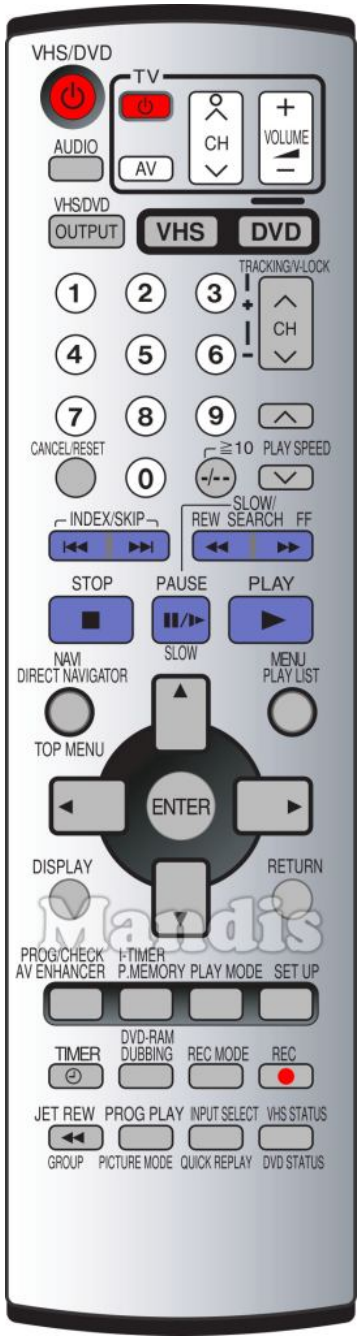

Original		Replacement		Original	Replacement
4	4	VIDEO 4	4		
5	5	TAPE 5	5		
6	6	TUNER 6	6		
7	7	AUX - HDD 7	7		
8	8	USB 8	8		
9	9	BLUETOOTH 9	9		
Y INPUT SELECT QUICK REPLAY	Input Select	RDS AV INPUT	AV / Input / RDS		
REW SEARCH	REW	TUNE-	<< / Tune-		

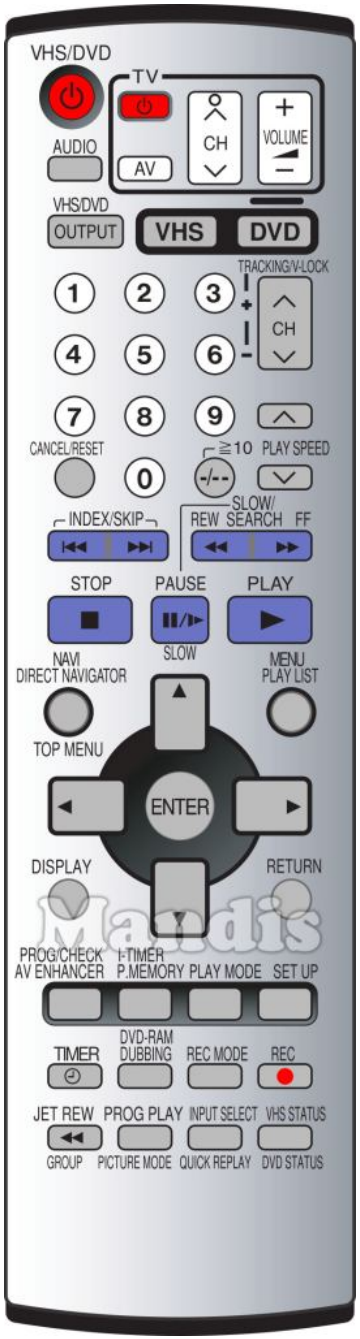

Original	Replacement	Original	Replacement
Power	Power		
AV	AV / Input / RDS		
Volume+	Vol+		
Volume-	Vol-		
CH+	CH+ / Page+		
CH-	CH- / Page-		