Mandis shop

JVC RMSUXA70MDR

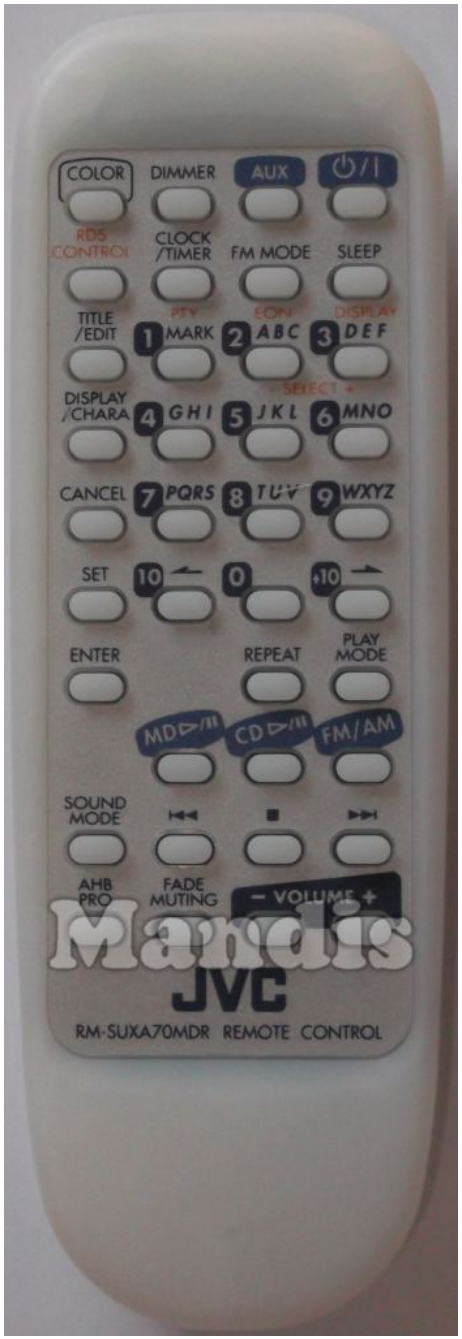

Original	Replacement
Power	Power
AUX	SHIFT + AUX - HDD 7 — Shift + 7
Dimmer	SHIFT + DIMMER MUTE — Shift + Mute / Dimmer
2	DVD 2 — 2
Color	OPT-TOOLS SETUP — Setup / OPT /
3	CD - STB 3 — 3
Clock/Timer	SHIFT + TIMER SLEEP — Shift + Sleep / Timer
FM Mode	SHIFT + PROGRAM TV/ RADIO — Shift + TV/Radio / Program
Sleep	TIMER SLEEP — Sleep / Timer
1	TV 1 — 1
EON	SHIFT + LIST SMART — Shift + Smart / List
Display	MEDIA DISPLAY — Display / Media
Select-	CH PAGE – — CH- / Page-
Select+	+ CH PAGE — CH+ / Page+
4	VIDEO 4 — 4
PTY	NETFLIX SEARCH — Red / Netflix / Search
5	TAPE 5 — 5

Original	Replacement
6	TUNER 6 — 6
7	AUX - HDD 7 — 7
8	USB 8 — 8
9	BLUETOOTH 9 — 9
0	HDMI - SAT 0 — 0
10	-/-- GUIDE EPG — Guide / EPG / -/--
10+	PC FAV MARKER — Fav / Marker / PC
Title/Edit	RETURN BACK — Back / Return
Display/Chara	SIZE ZOOM — Zoom / Size
Cancel	CLEAR EXIT CANCEL — Exit / Cancel / Clear
Set	HOME MENU — Menu / Home
Enter	OK — OK
Repeat	APP REPEAT — Green / APP / Repeat
Play Mode	LIST SMART — Smart / List
MD Play/Pause	STEP - FREEZE — Pause / Step / Freeze
CD Play/Pause	SLOW — Play / Slow
FM/AM	PROGRAM TV/ RADIO — TV/Radio / Program

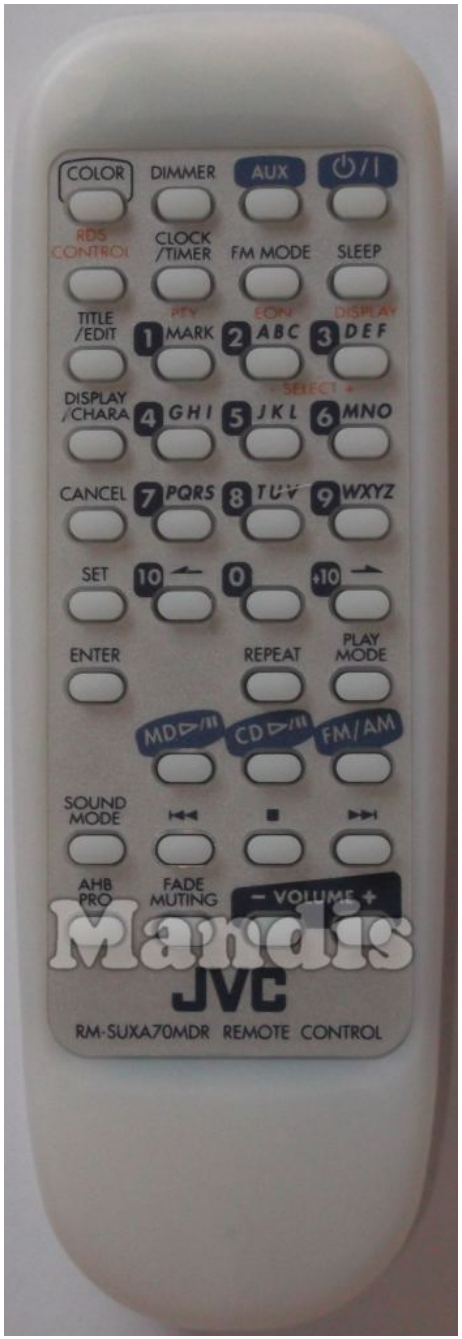

Original	Replacement	Original	Replacement
Sound Mode	Sound / Title		
I<<	I<< / Preset-		
Stop	Stop / Hold		
>>I	>>I / Preset+		
AHB PRO	Subtitle / EQ		
Fade Muting	Mute / Dimmer		
Vol-	Vol-		
Vol+	Vol+		