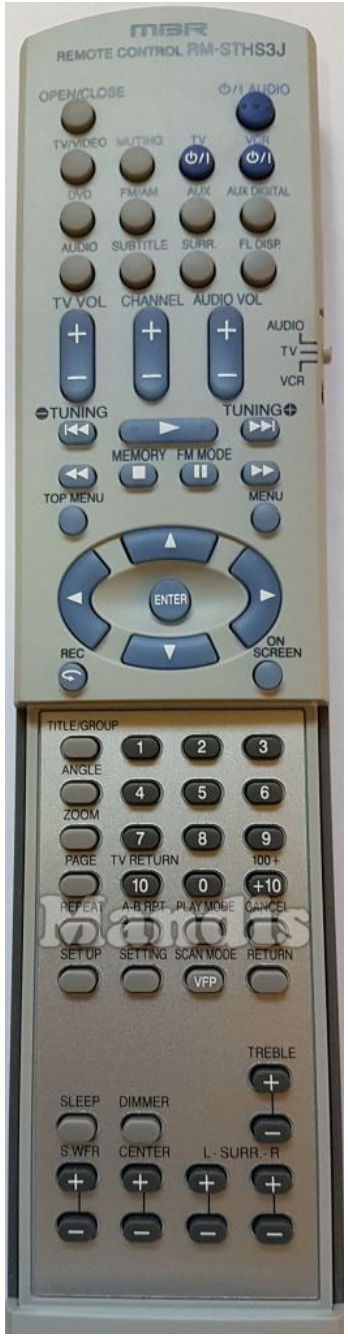

Original		Replacement		Original	Replacement
	Power		Power		
	Tv Vol+		Vol+		
	CH+		CH+ / Page+		
	Tv Vol-		Vol-		
	CH-		CH- / Page-		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	+10/100+		Guide / EPG / -/--		
	0		0		
	10/Tv Return		Fav / Marker / PC		

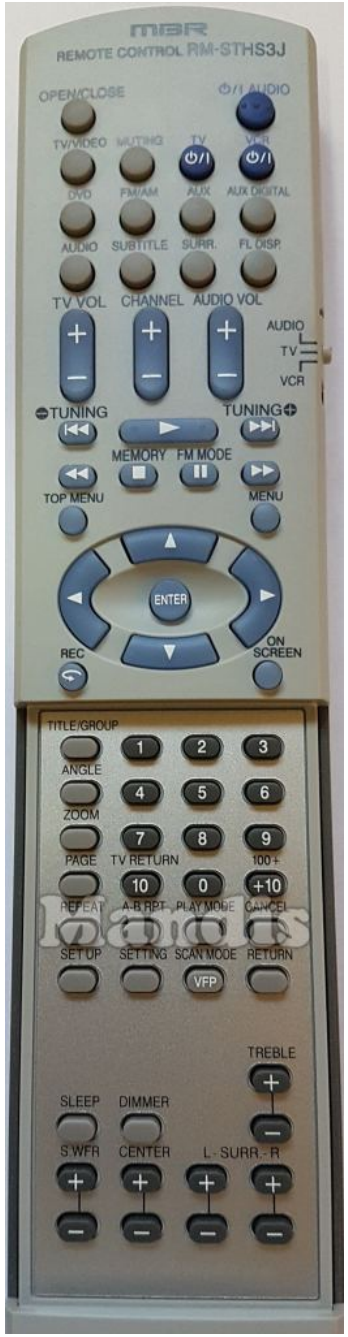

Original		Replacement	
	Power		Power
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	CH+		CH+ / Page+
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Original		Replacement	
	0		0

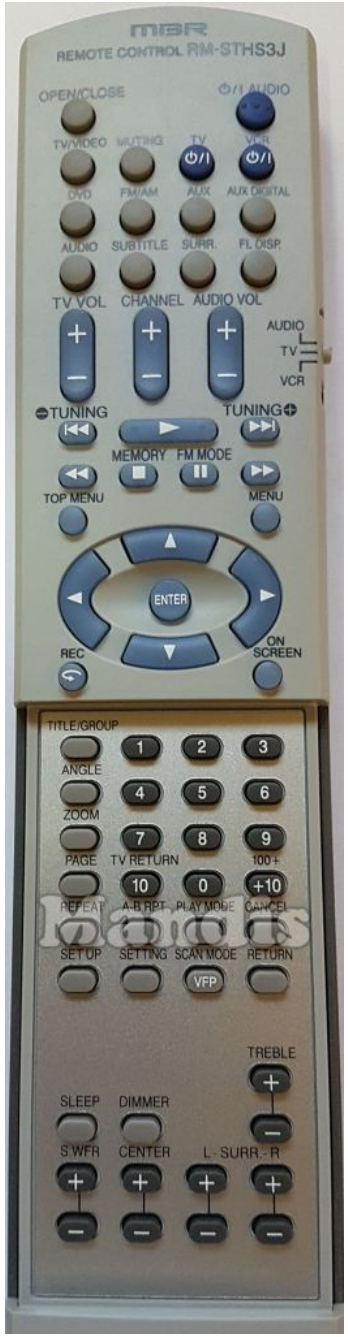

Original	Replacement
Power	Power
Muting	Mute / Dimmer
Play	Play / Slow
Pause/FM Mode	Pause / Step / Freeze
Stop/Memory	Stop / Hold
←/Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
I<<</Tuning-	I<< / Preset-
>>I/Tuning+	>>I / Preset+
Surr.	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Open/Close	Eject / Surround
Page	Picture / Format
Zoom	Zoom / Size
Sleep	Sleep / Timer

Original	Replacement
Tv/Video	TV/Radio /
Setting	D.Menu / Top
Set Up	Setup / OPT /
VFP/Scan Mode	AV / Input / RDS
Menu	Menu / Home
Up	Up
Angle	Info / Angle
Left	Left
Enter	OK
Right	Right
Cancel	Exit / Cancel / Clear
Down	Down
Return	Back / Return
Audio Vol+	Vol+
S.WFR+	CH+ / Page+
Audio Vol-	Vol-
On Screen	Display / Media

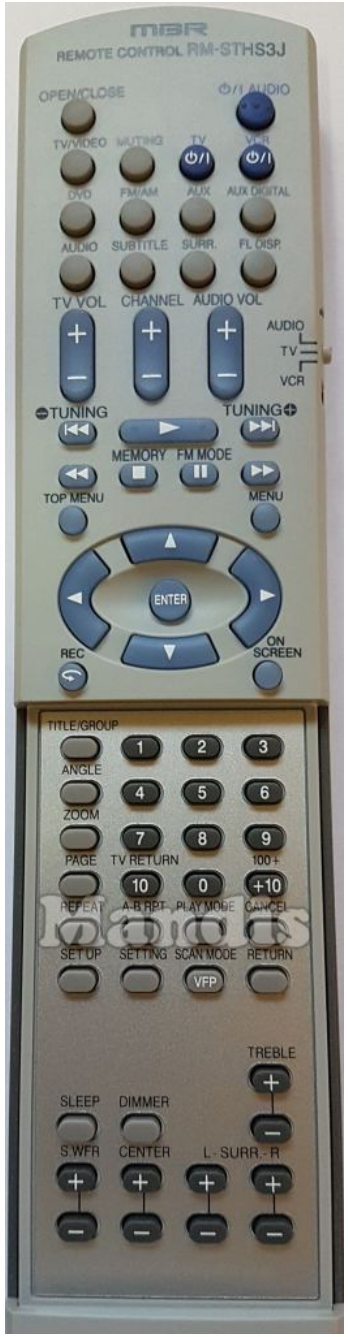

Original		Replacement	
	S-WFR-	CH PAGE –	CH- / Page-
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
100+ +10	+10/100+	-/-- GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
TV RETURN 10	10/Tv Return	PC FAV MARKER	Fav / Marker / PC
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
A-B RPT	A-B RPT	YouTube REPEAT A-B	Yellow / YouTube / Repeat
AUX DIGITAL	AUX Digital	Prime Video RANDOM	Blue / Prime Video / Random
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer

Original		Replacement	
PLAY MODE	Play Mode	SHIFT + SLOW ▶	Shift + Play /
TITLE/GROUP	Title Group	SHIFT + TITLE SOUND	Shift + Sound / Title
FM/AM	FM/AM	SHIFT + PROGRAM TV/ RADIO	Shift + TV/Radio / Program
TOP MENU	Top Menu	SHIFT + TOP MENU D.MENU	Shift + D.Menu / Top Menu
CENTER +	Center+	SHIFT + ▲	Shift + Up
–	Center-	SHIFT + ▼	Shift + Down
L-SUR +	L-Surr+	SHIFT + + VOL	Shift + Vol+
TREBLE +	Treble+	SHIFT + + CH PAGE	Shift + CH+ /
–	L-Surr-	SHIFT + VOL –	Shift + Vol-
–	Treble-	SHIFT + CH PAGE –	Shift + CH- /
DVD	DVD	SHIFT + DVD 2	Shift + 2
FL DISP	FL. Disp	SHIFT + TAPE 5	Shift + 5
AUX	AUX	SHIFT + AUX - HDD 7	Shift + 7
SURR. R +	Surr R+	SHIFT + USB 8	Shift + 8
–	Surr R-	SHIFT + HDMI - SAT 0	Shift + 0