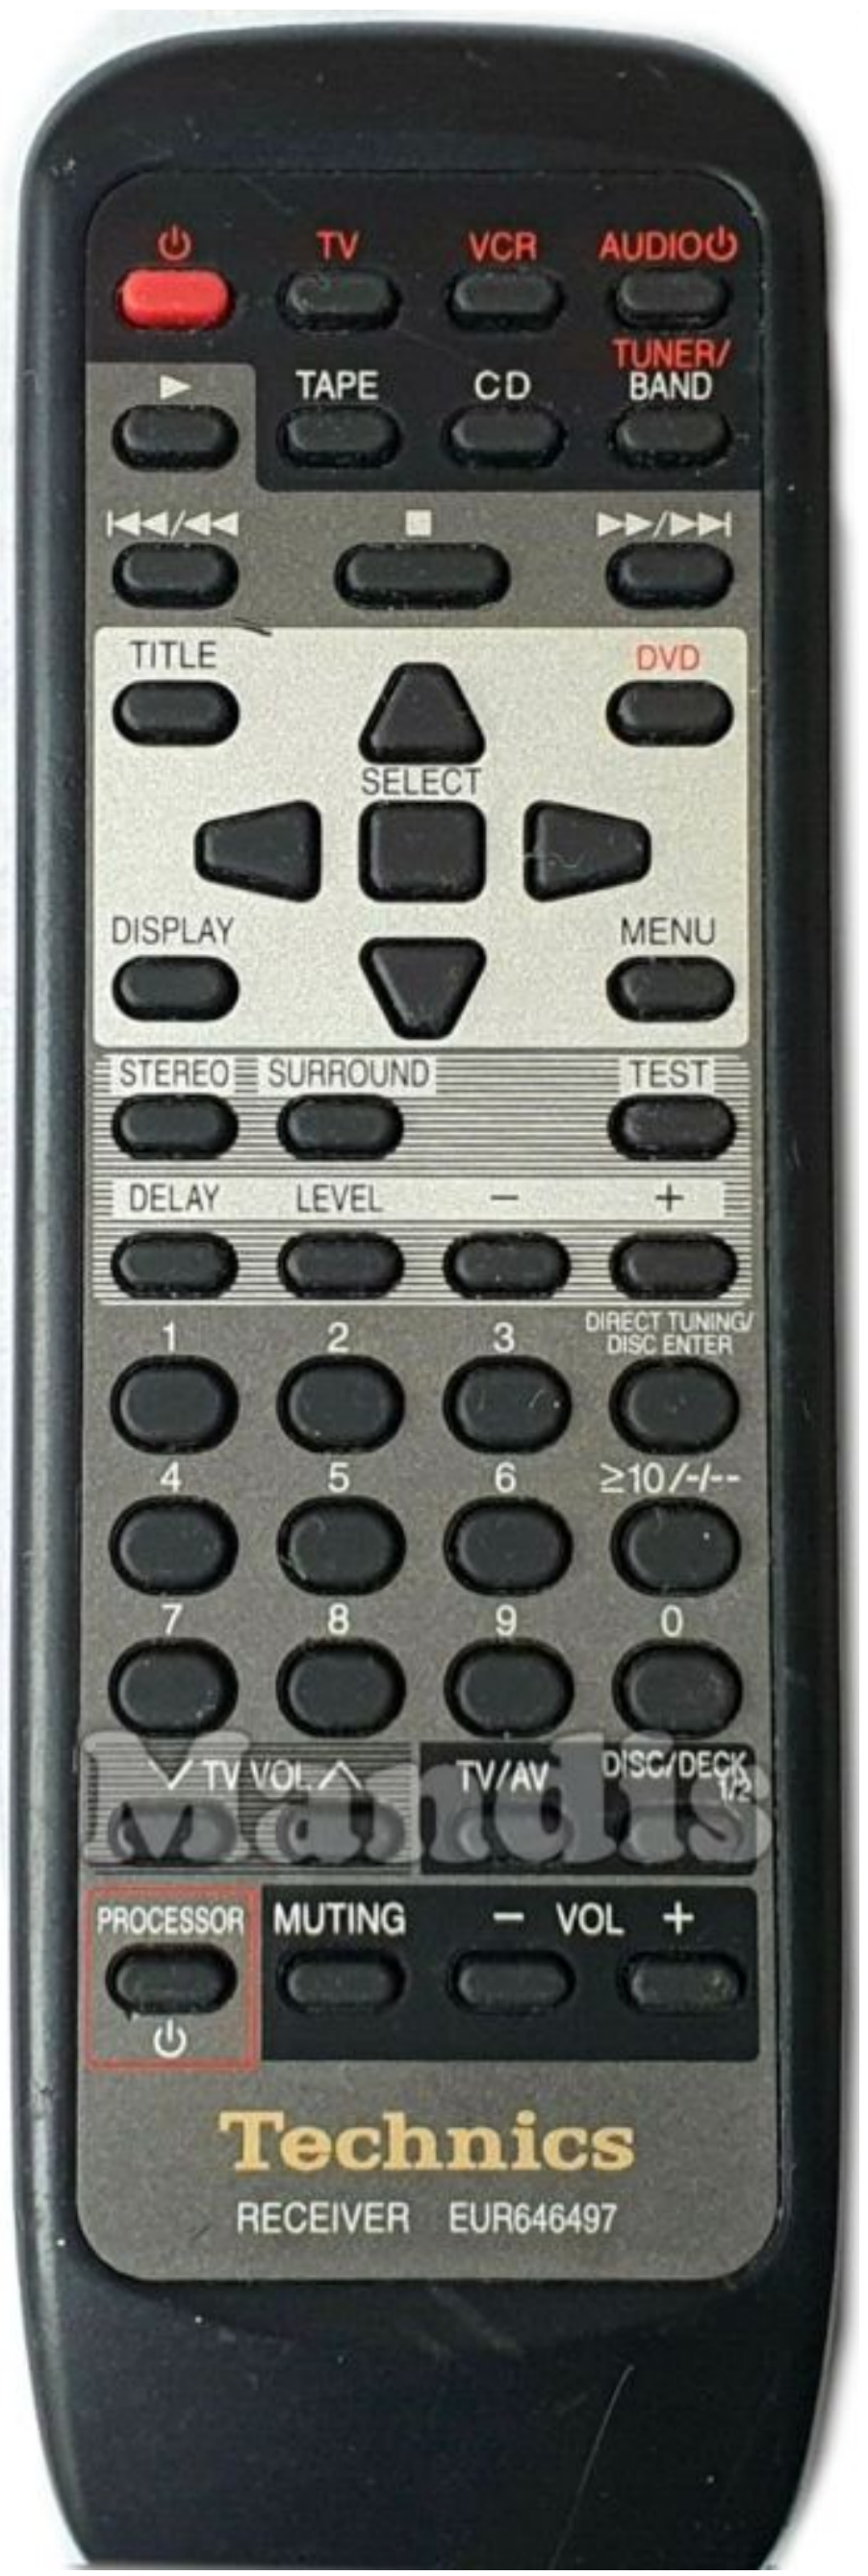

Original	Replacement	Original	Replacement
Power TV	Power	Delay	Back / Return
TV	Shift + 1	Level	Smart / List
VCR	Shift + 4	-	CH- / Page-
Tape	Shift + 5	+	CH+ / Page+
CD	Shift + 3	1 Tv	1
Tuner/Band	Shift + 6	2 Tv	2
Up	Up	3 Tv	3
DVD	Shift + 2	4 Tv	4
Left	Left	5 Tv	5
Select	OK	6 Tv	6
Right	Right	>10/-/-- Tv	Guide / EPG / -/--
Display	Display / Media	7 Tv	7
Down	Down	8 Tv	8
Menu	Menu / Home	9 Tv	9
Stereo	Audio / Lang I/II	0 Tv	0
Surround	Eject / Surround	Tv Vol Down	Shift + Vol -
Test	Text / Goto	Tv Vol Up	Shift + Vol +

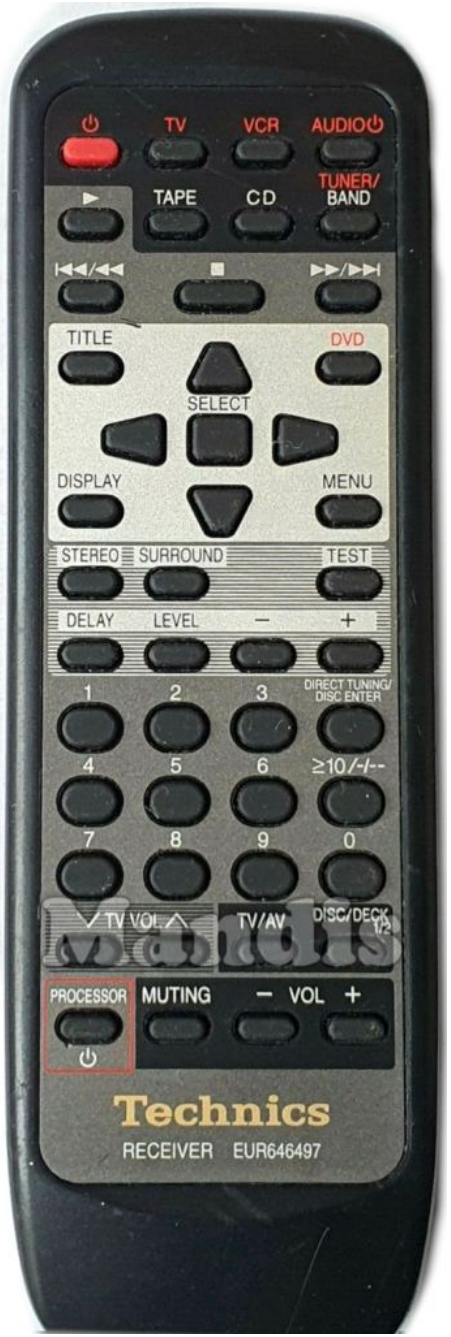

Original		Replacement		Original	Replacement
TV/AV	Tv/AV	RDS AV INPUT	AV / Input / RDS		
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D.Menu / Top		
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
VOL -	Vol -	VOL -	Vol -		
VOL +	Vol +	VOL +	Vol +		

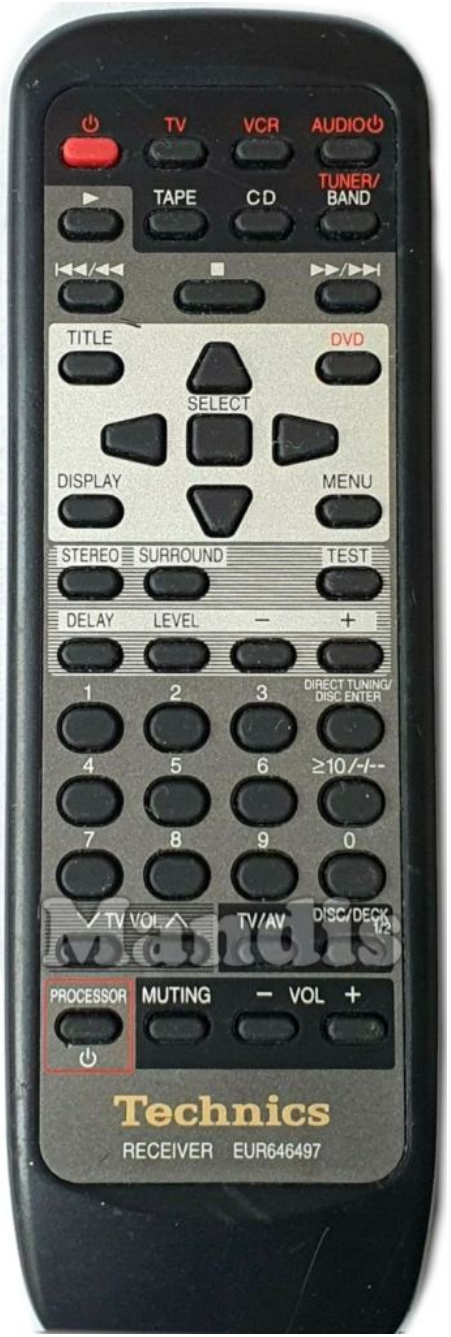

Original		Replacement	
Power DVD		Power	
TV		Shift + 1	SHIFT + TV 1
VCR		Shift + 4	SHIFT + VIDEO 4
Play DVD		Play / Slow	SLOW
Tape		Shift + 5	SHIFT + TAPE 5
CD		Shift + 3	SHIFT + CD - STB 3
Tuner / Band		Shift + 6	SHIFT + TUNER 6
I <<I / << DVD		I << / Preset-	PRESET-
I <<I / << DVD		<< / Tune-	TUNE-
Stop DVD		Stop / Hold	HOLD
>>I / >>I DVD		>> / Tune+	TUNE+
>>I / >>I DVD		>>I / Preset+	PRESET+
Up		Up	
DVD		Shift + 2	SHIFT + DVD 2
Left		Left	
Select		OK	OK
Right		Right	

Original		Replacement	
Display		Display / Media	MEDIA DISPLAY
Down		Down	
Menu		Menu / Home	HOME MENU
Stereo		Audio / Lang I/II	LANG I/II AUDIO
Surround		Eject / Surround	SURROUND
Test		Text / Goto	GOTO TEXT
Delay		Back / Return	RETURN BACK
Level		Smart / List	LIST SMART
-		CH- / Page-	CH PAGE -
+		CH+ / Page+	CH PAGE +
1 DVD		1	TV 1
2 DVD		2	DVD 2
3 DVD		3	CD - STB 3
4 DVD		4	VIDEO 4
5 DVD		5	TAPE 5
6 DVD		6	TUNER 6
>10/-/-- DVD		Guide / EPG / -/--	-/-- GUIDE EPG

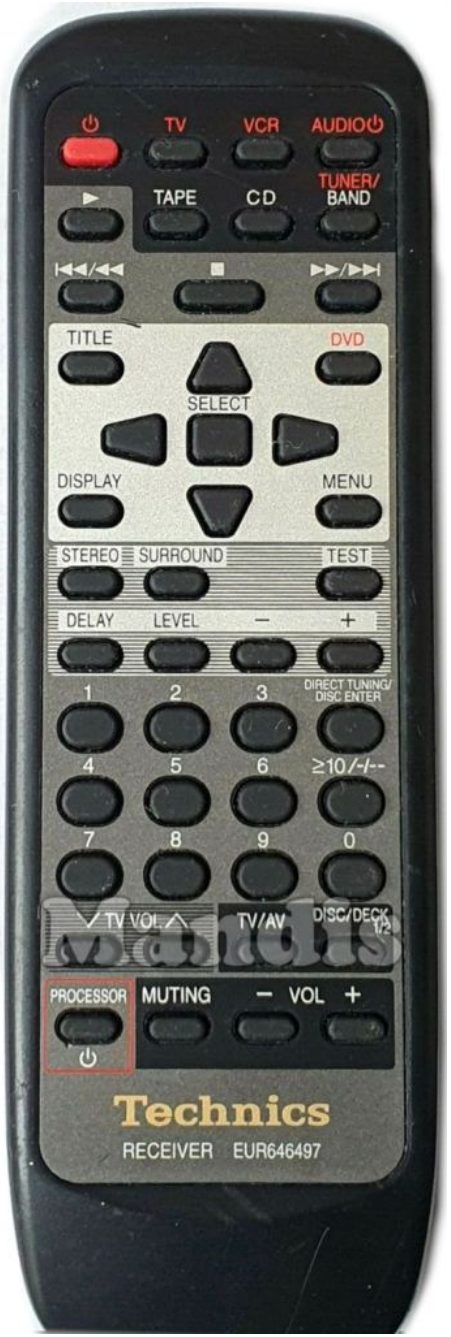

Original		Replacement	
7	7 DVD	AUX - HDD 7	7
8	8 DVD	USB 8	8
9	9 DVD	BLUETOOTH 9	9
0	0 DVD	HDMI - SAT 0	0
DISC/DECK 1/2	Disc/Deck 1/2	TOP MENU D.MENU	D.Menu / Top
MUTING	Muting	DIMMER MUTE	Mute / Dimmer
– VOL	Vol -	VOL –	Vol -
VOL +	Vol +	+ VOL	Vol +

Original	Replacement

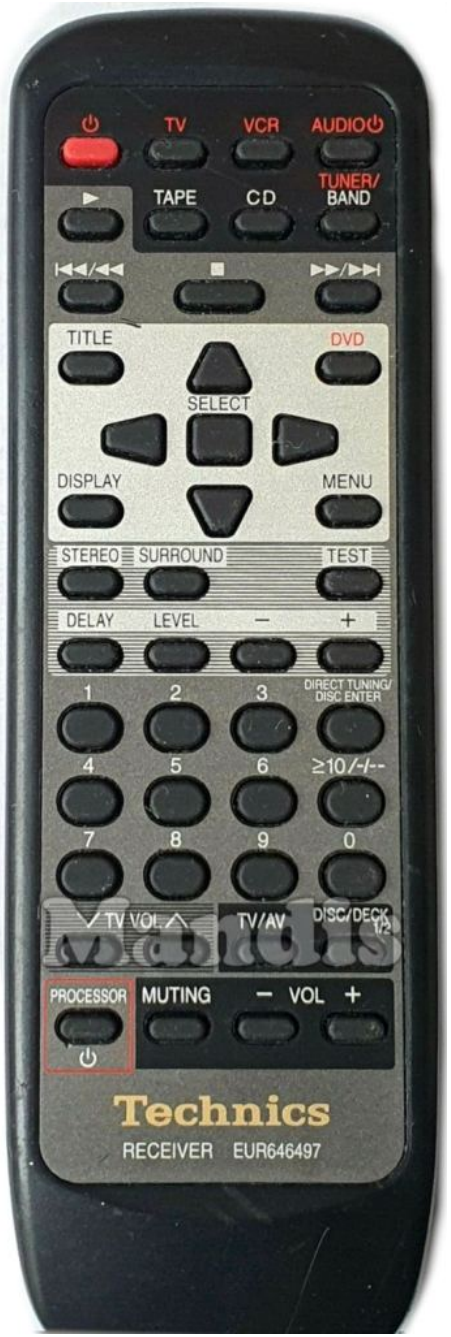

Original	Replacement
Power CD	Power
Power Tape	Shift + Power
TV	Shift + 1
VCR	Shift + 4
Play CD	Play / Slow
Play Tape	Shift + Play /
Tape	Shift + 5
CD	Shift + 3
Tuner / Band	Shift + 6
I <</ << CD	<< / Tune-
I <</ << Tape	Shift + I << / Preset-
I <</ << CD	I << / Preset-
I <</ << Tape	Shift + << /
Stop CD	Stop / Hold
Stop Tape	Shift + Stop /
>>/ >>I CD	>> / Tune+
>>/ >>I Tape	Shift + >> / Tune+

Original	Replacement
>>/ >>I CD	>>I / Preset+
>>/ >>I Tape	Shift + >>I / Preset+
Up	Up
DVD	Shift + 2
Left	Left
Select	OK
Right	Right
Display	Display / Media
Down	Down
Menu	Menu / Home
Stereo	Audio / Lang I/II
Surround	Eject / Surround
Test	Text / Goto
Delay	Back / Return
Level	Smart / List
-	CH- / Page-
+	CH+ / Page+

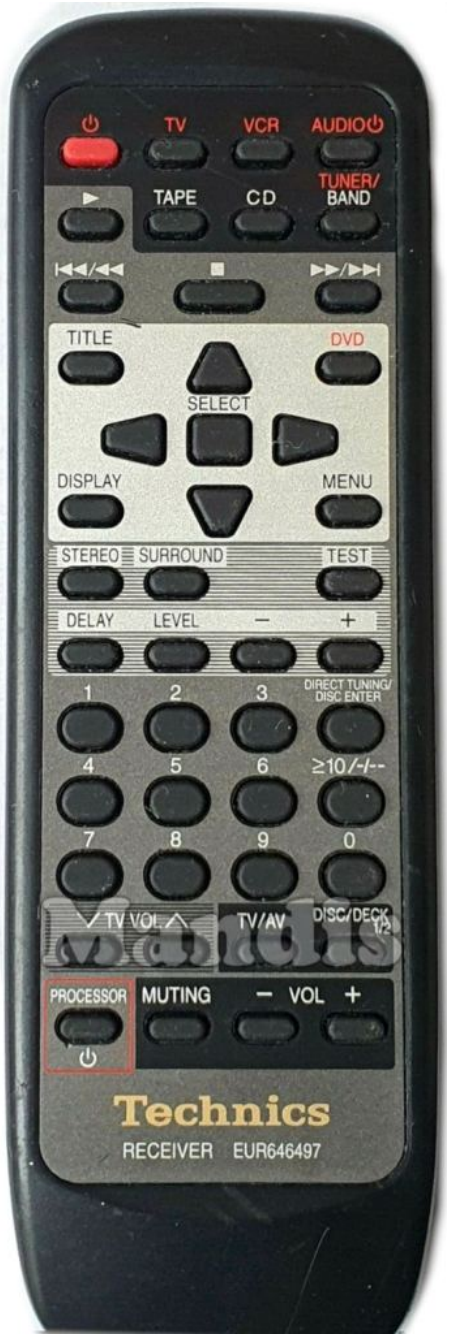

Original		Replacement		Original	Replacement
1	1 CD-Tape	1	1		
2	2 CD-Tape	2	2		
3	3 CD-Tape	3	3		
DIRECT TUNING/ DISC ENTER	Direct Tuning/Disc Ente	TOP MENU D.MENU	D.Menu / Top		
4	4 CD-Tape	4	4		
5	5 CD-Tape	5	5		
6	6 CD-Tape	6	6		
≥10/-/--	>10/-/-- CD-Tape	GUIDE EPG	Guide / EPG / -/--		
7	7 CD-Tape	7	7		
8	8 CD-Tape	8	8		
9	9 CD-Tape	9	9		
0	0 CD-Tape	0	0		
DISC/DECK 1/2	Disc/Deck 1/2	ANGLE INFO	Info / Angle		
DISC/DECK 1/2	Disc/Deck 1/2	SHIFT + ANGLE INFO	Shift + Info / Angle		
MUTING	Muting	DIMMER MUTE	Mute / Dimmer		
VOL -	Vol -	VOL -	Vol -		
VOL +	Vol +	VOL +	Vol +		

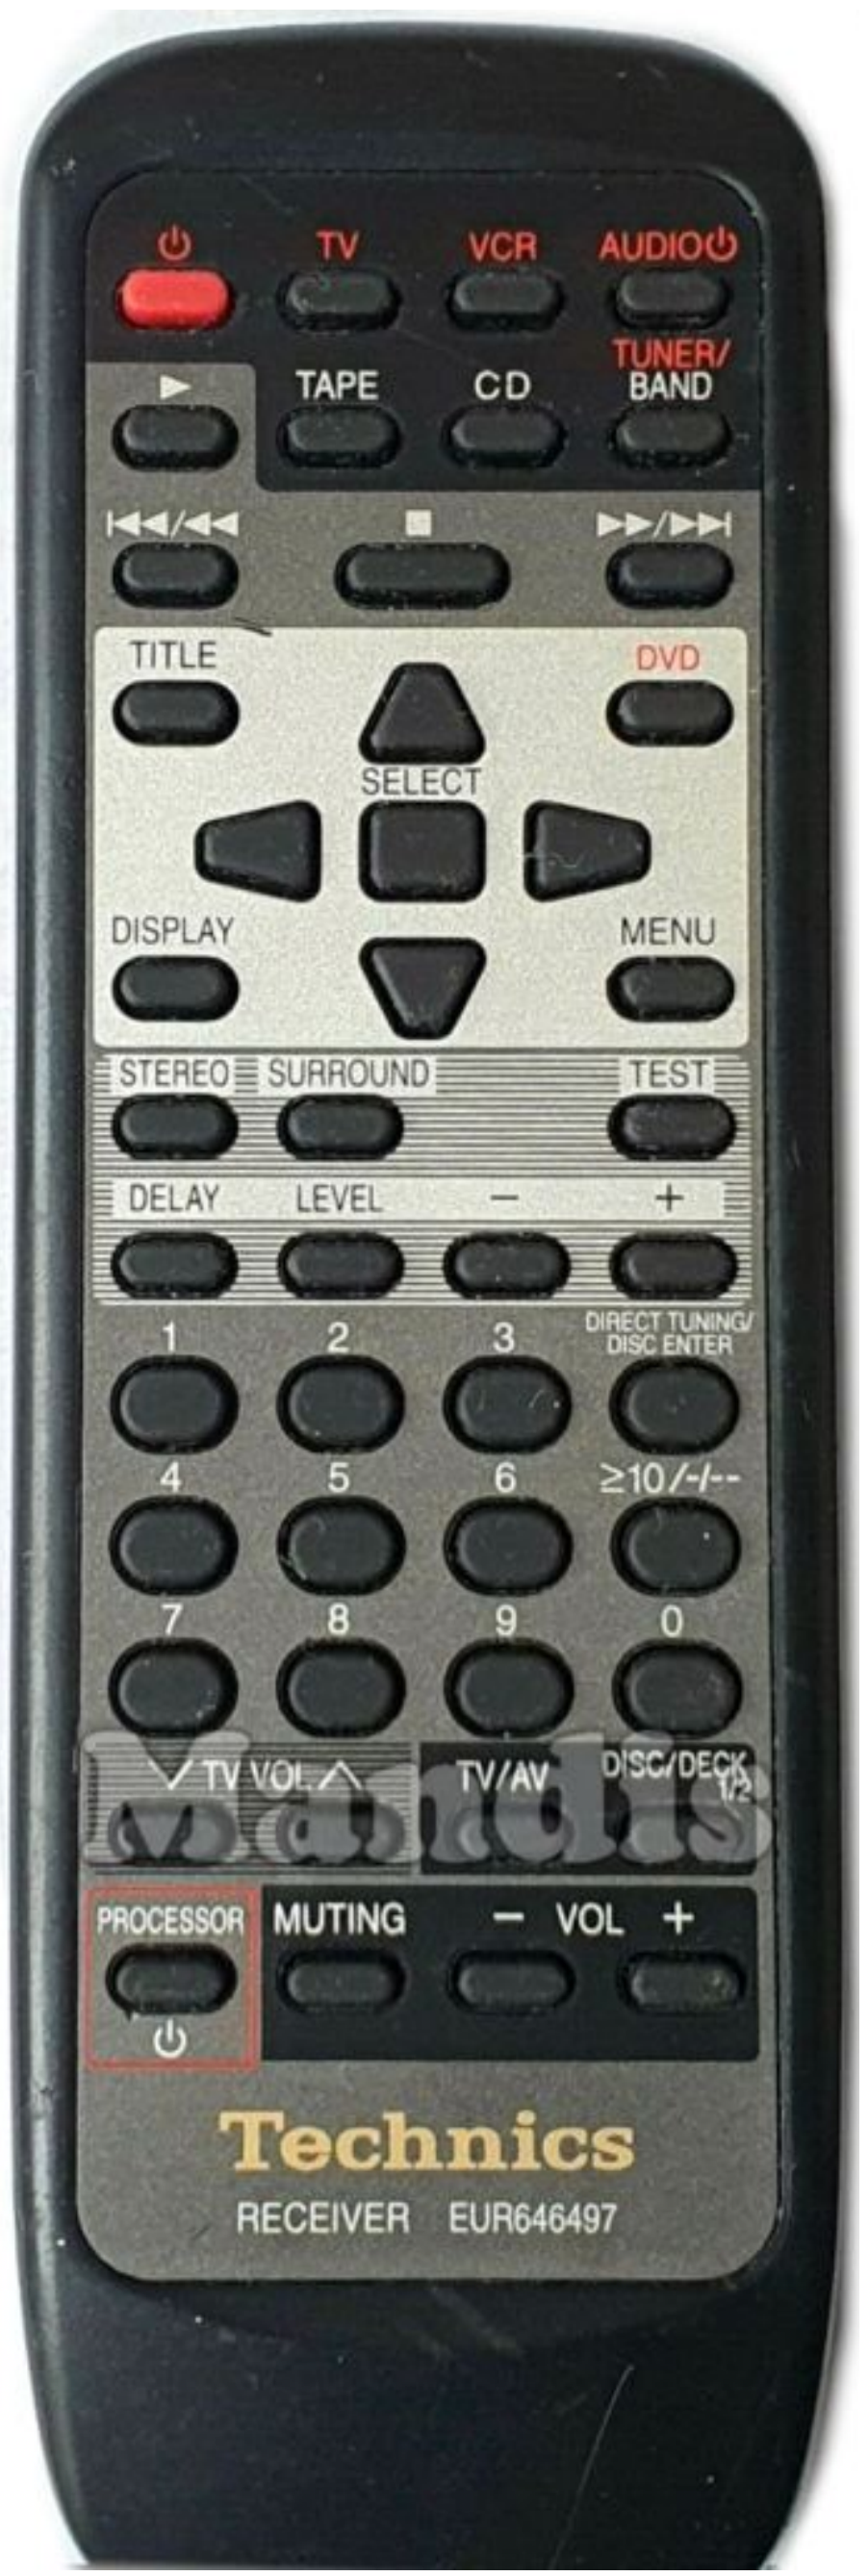

Original	Replacement	Original	Replacement
Power VCR	Shift + Power	Down	Down
Power Tuner/Band	Power	Menu	Menu / Home
TV	Red / Netflix / Search	Stereo	Audio / Lang I/II
VCR	Fav / Marker / PC	Surround	Eject / Surround
Play	Play / Slow	Test	Text / Goto
Tape	Shift + Fav / Marker / PC	Delay	Back / Return
CD	Yellow / YouTube / Repeat	Level	Smart / List
Tuner/Band	Blue / Prime Video / Random	-	CH- / Page-
I<</<<	<< / Tune-	+	CH+ / Page+
Stop	Stop / Hold	1 VCR	Shift + 1
>>/>>I	>> / Tune+	1 Tuner/Band	1
Up	Up	2 VCR	Shift + 2
DVD	Green / APP / Repeat	2 Tuner/Band	2
Left	Left	3 VCR	Shift + 3
Select	OK	3 Tuner/Band	3
Right	Right	Direct Tuning/Disc Ente	D.Menu / Top
Display	Display / Media	4 VCR	Shift + 4

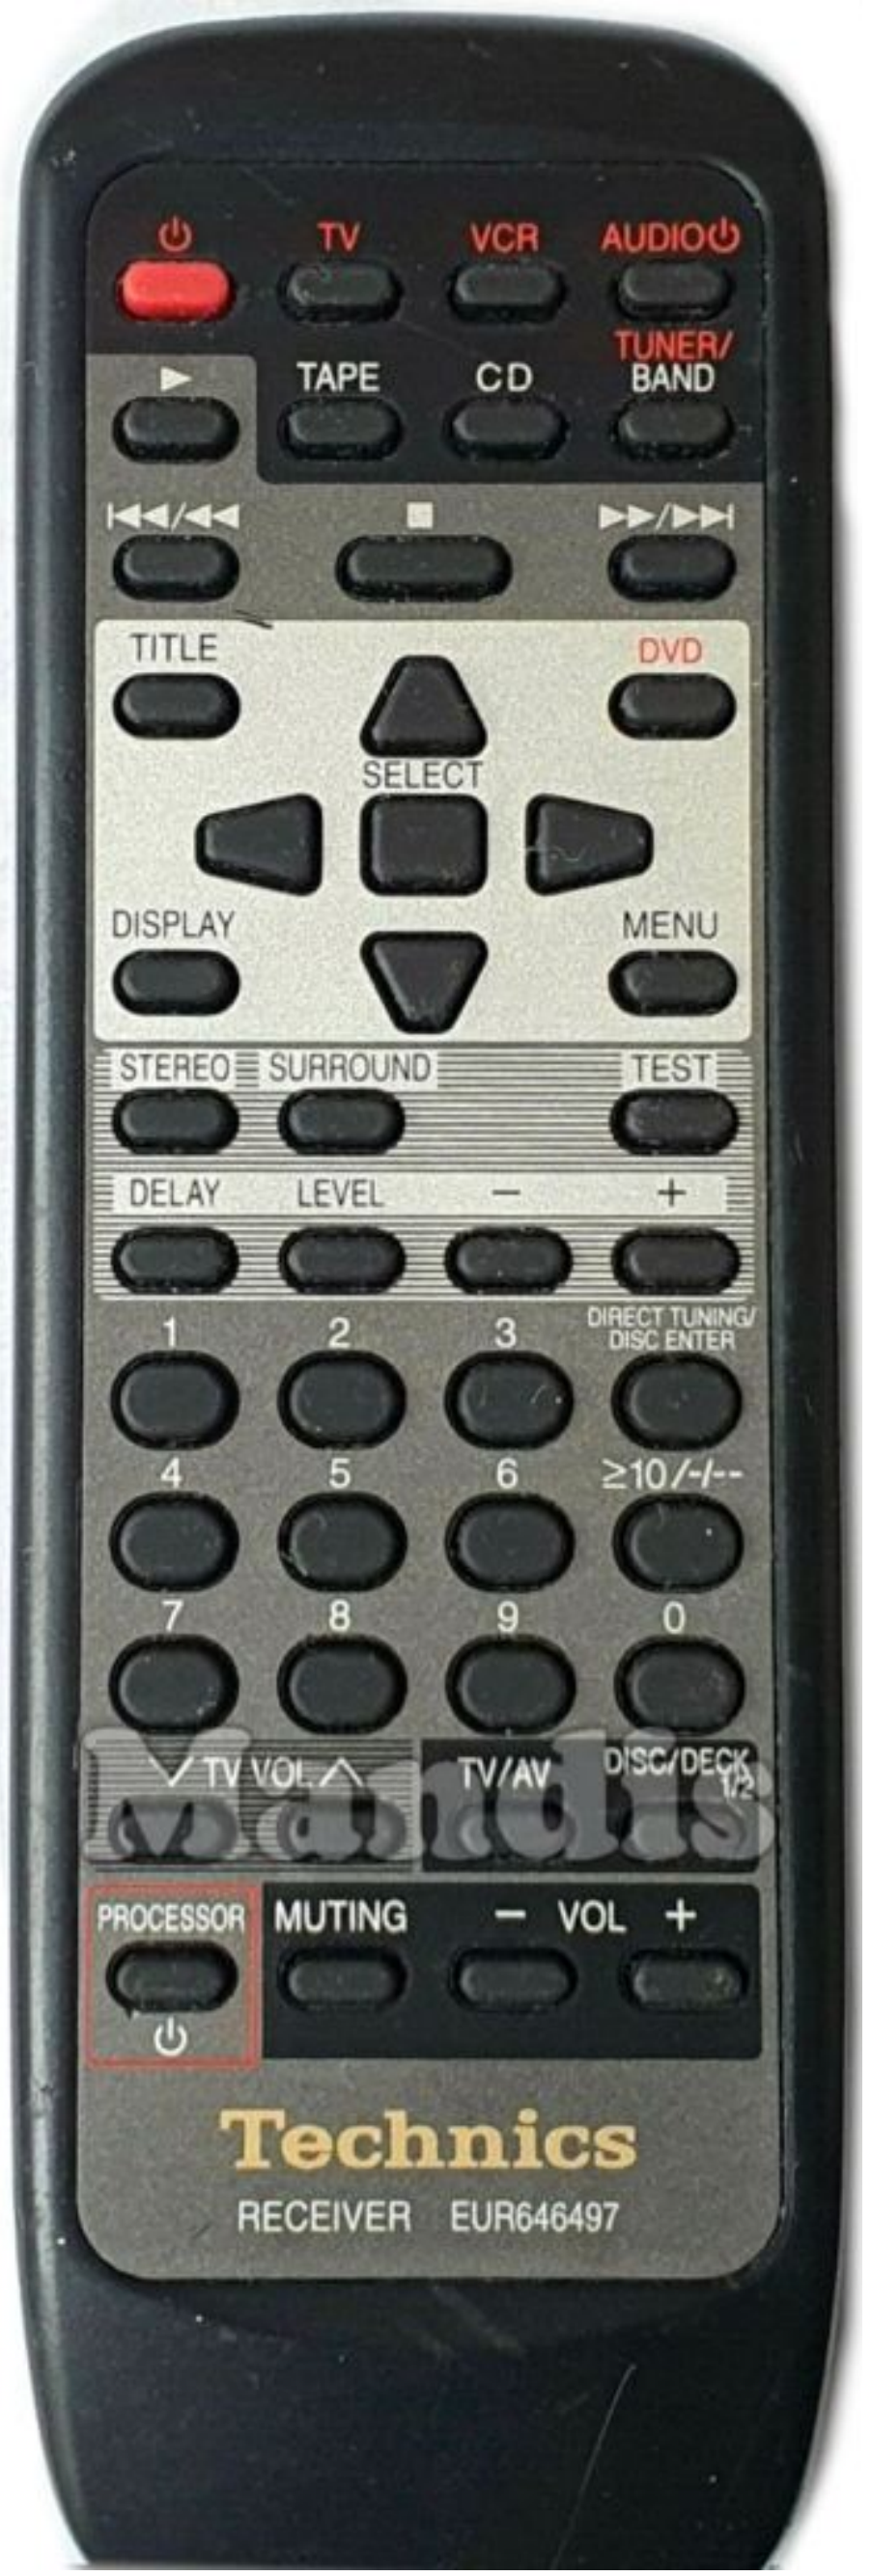

Original	Replacement	Original	Replacement
4 Tuner/Band	4	Vol -	Vol -
5 VCR	Shift + 5	Vol +	Vol +
5 Tuner/Band	5		
6 VCR	Shift + 6		
6 Tuner/Band	6		
>10/-/-- VCR	Shift + Guide / EPG / -/--		
>10/-/--	Guide / EPG / -/--		
7 VCR	Shift + 7		
7 Tuner/Band	7		
8 VCR	Shift + 8		
8 Tuner/Band	8		
9 VCR	Shift + 9		
9 Tuner/Band	9		
0 VCR	Shift + 0		
0 Tuner/Band	0		
Disc/Deck 1/2	Info / Angle		
Muting	Mute / Dimmer		