Mandis shop

Telesystem TELE002

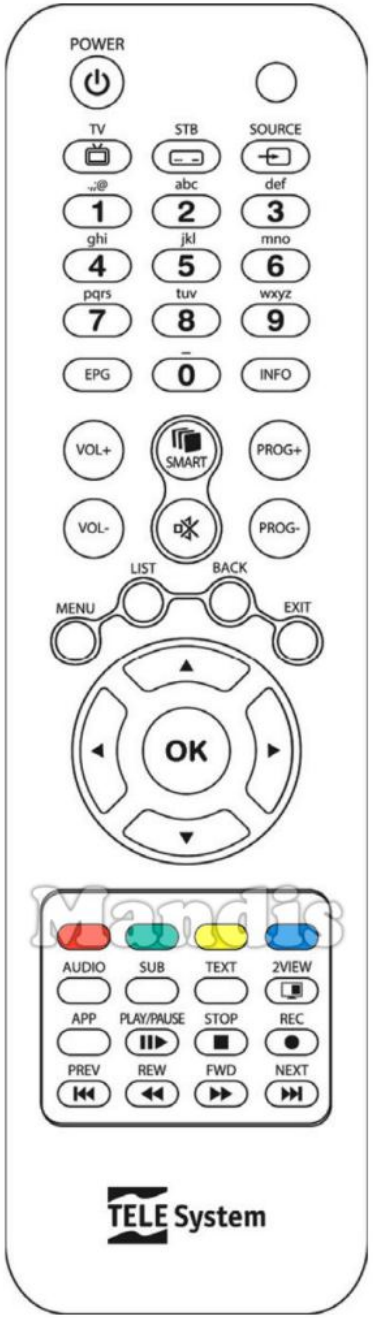

Original		Replacement	
POWER	Power		Power
1	1	TV 1	1
abc 2	2	DVD 2	2
def 3	3	CD - STB 3	3
ghi 4	4	VIDEO 4	4
jkl 5	5	TAPE 5	5
mno 6	6	TUNER 6	6
pqrs 7	7	AUX - HDD 7	7
tuv 8	8	USB 8	8
wxyz 9	9	BLUETOOTH 9	9
EPG	EPG	-/-- GUIDE EPG	Guide / EPG / -/--
0	0	HDMI - SAT 0	0
INFO	Info	ANGLE INFO	Info / Angle
VOL+	Vol +	+ VOL	Vol +
SMART	Smart	LIST SMART	Smart / List
PROG+	Prog+	+ CH PAGE	CH+ / Page+
VOL-	Vol -	VOL −	Vol -

Original		Replacement	
	Mute	DIMMER MUTE	Mute / Dimmer
PROG-	Prog-	CH PAGE −	CH- / Page-
LIST	List	MEDIA DISPLAY	Display / Media
BACK	Back	RETURN BACK	Back / Return
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
MENU	Menu	HOME MENU	Menu / Home
	Up		Up
	Left		Left
OK	OK	OK	OK
	Right		Right
	Down		Down
	Red	NETFLIX SEARCH	Red / Netflix / Search
	Green	APP REPEAT	Green / APP / Repeat
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue	Prime Video RANDOM	Blue / Prime Video / Random
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II
SUB	Sub	EQ SUBTITLE	Subtitle / EQ

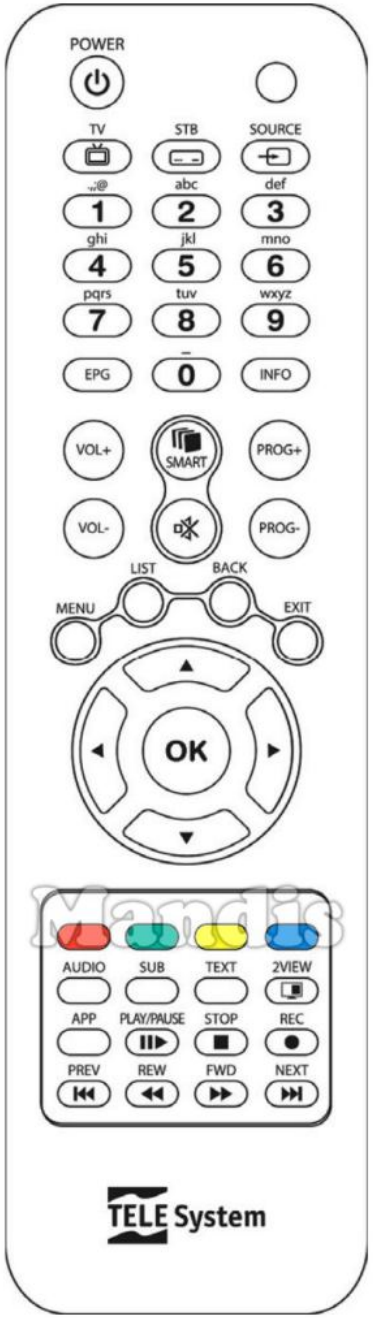

Original		Replacement	
TEXT	Text	GOTO TEXT	Text / Goto
2VIEW	2View	OPT-TOOLS SETUP	Setup / OPT /
APP	APP	SHIFT + APP REPEAT	Shift + Green / APP /
PLAY/PAUSE	Play / Pause	SLOW	Play / Slow
PLAY/PAUSE	Play / Pause	STEP-FREEZE	Pause / Step / Freeze
STOP	Stop	HOLD	Stop / Hold
REC	Rec	REC MODE	Rec / Rec Mode
PREV	<< PREV	PRESET-	<< / Preset-
REW	<< REW	TUNE-	<< / Tune-
FWD	>> FWD	TUNE+	>> / Tune+
NEXT	>>I NEXT	PRESET+	>>I / Preset+

Original	Replacement